


# Руководство пользователя

автоматическая кормушка для  
животных **F19-L**

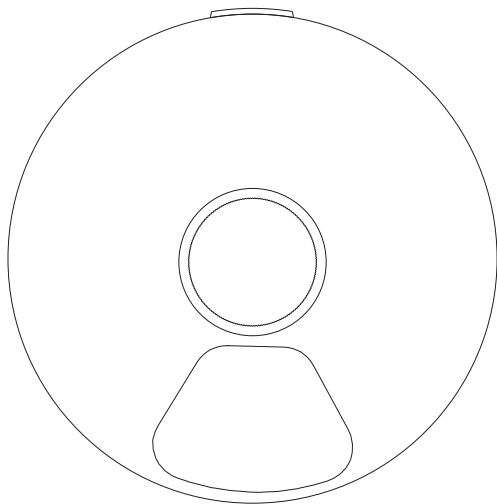

Перед использованием данного изделия внимательно прочитайте руководство.

## Руководство по безопасности



#Z 00000000000000000000000000000000

000000

0 00000000000000000000000000000000

000

000

0 00000000000000000000000000000000

0 000000000000

0 00000000000000000000000000000000

000000000000



### Важная информация по безопасности

1. Please plug in the power supply to ensure stable use of the feeder.
2. This product is only applicable to cats and small dogs.
3. Do not allow small children to play with, in or around pet feeder.
4. The filling in the ice pack is not edible. If it is damaged, do not use it.
5. Do not immerse control board in water. The device should not be submerged in water at any time, as this may damage electronic components.
6. Do not disassemble the pet feeder other than components.
7. Do not place or store an appliance into a tub or sink.
8. Please avoid the charging port from getting wet. If the charging port is wet, it should be fully dried before charging.
9. The feeder only supports charging with 3pcs AA Batteries.
10. Always unplug the feeder when not in use. The device should be full charged if stored for over 6 months.
11. Do not allow pets to chew on or swallow any parts.
12. Do not use the pet feeder for any purpose other than feeding pets.

## Компоненты

Верхняя крышка

Запорная крышка

Крышка первого корма

Чаша для корма

Панель дисплея


Шестигранный кронштейн

Плата управления

Пакеты со льдом

Основной блок

Батарейный  
отсек

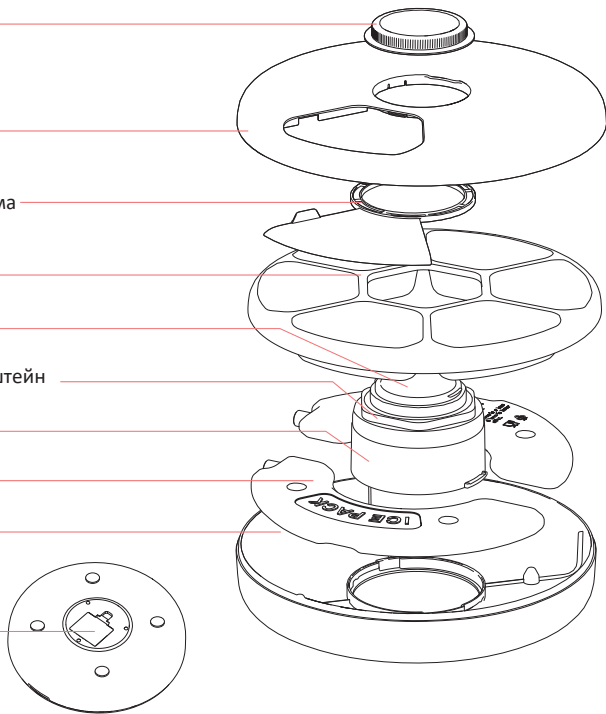

## Знакомство с продуктом

Название продукта	кормушка для животных
Модель продукта	F19-L
Размеры	310мм*310мм*85мм
Размеры коробки	348мм*326мм*107мм
Материал	Пищевой ABS, ПЭВП (пакеты со льдом)
Чистый вес	1 кг
Тип корма	Все типы корма для животных
Тип животных	Маленькие собаки/кошки
Объем	200мл*6 (90-100г на лоток)
Питание	батарейки AA 3 шт.

## Установка и сборка


Установите три батарейки типа AA в отсек для батарей на обратной стороне продукта.

**Примечание:** Please make sure the 3pcs AA batteries are new and same specifications. Different battery specs and lifelong will effect the device working normally.

Откройте крышку

① Lay the feeder flat and turn it clockwise to remove the locked lid.

② Lift the entire top lid upwards.

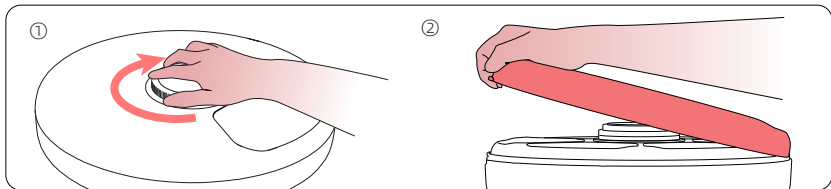

## Place the Ice Pack

Take out the ice packs, place the ice packs horizontally in the refrigerator freezer (-18 °C) and freeze it for at least 6 hours, then take it out for use.



### \*Примечание:

Do not freeze the ice packs vertically, which will cause the ice pack bulge.


No need ice pack for dry pet food.

The fresh-keeping effect of ice packs are affected by environmental factors.

## Fill up Pet Food

① Place the food bowl into the base unit, and then fill up with pet food in turn.


② Cover the top lid and lock it.

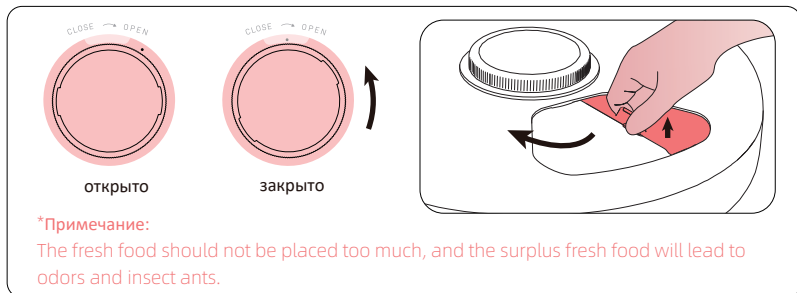

### \*Примечание:

The fresh food should not be placed too much, and the surplus fresh food will lead to odors and insect ants.


## Разблокировка дисплея

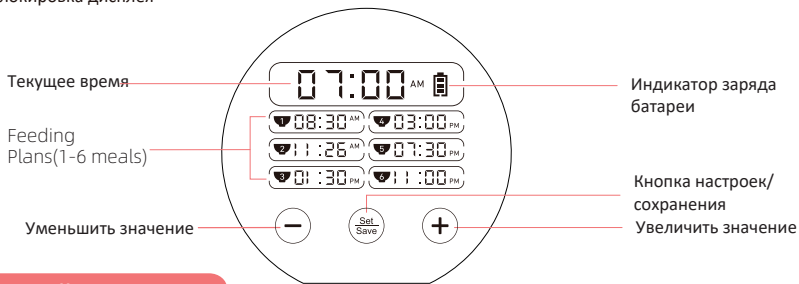





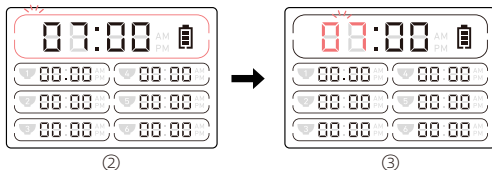


## Настройка продукта

### Current Time Setting

- ① Press and hold the "+" and "-" buttons at the same time for 3s to switch between 24-hour and 12-hour systems.
- ② Press the "Set Save" button to confirm the current time frame is flashing, long press the "Set Save" button to enter the clock setting.
- ③ Press "+/-" to adjust the clock value, press "Set Save" to save and enter the minute setting.
- ④ Press "+/-" to adjust the minute value, long press "Set Save" to save the current time.




## Program Meal Time

- ① Short press the "  " button and press the "  " or "  " to choose feeding meals.
- ② Press and hold the "  " button till the feeding meal frame is flashing, then press "  " or "  " to adjust the clock and minute and press "  " to save.
- ③ The settings for the next 2-6 meals are the same as the first meal.

### Примечание:

\*If there is no need for six feeding plans, long press the "  " button until you hear a "Di" sound to save the set feeding plan.

\*This device can set up to six feeding plans.

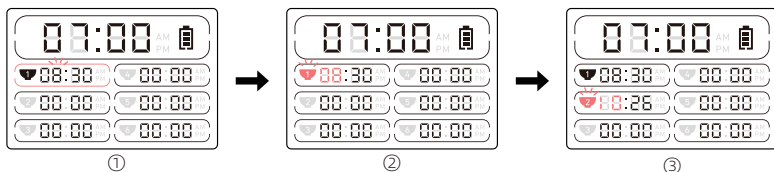

## Однократное кормление

Press and hold press "  " button for 3 seconds to do the manually feeding once.

## Отмена графика кормления

If the feeding time is set to "00:00" or "AM12:00", the feeding time will not be feed.



## Сброс до заводских настроек

Press "  " and "  " at same time for 10 seconds, until you hear the twice sound "Di" means all settings have been cleared.

## Чистка и обслуживание

### Чистка внутренней части продукта и чаши для корма

- ① Перед чисткой извлеките все батареи.
- ② Rotate the protective cover lock clockwise, and take out the top cover and food tray in turn.
- ③ Rotate the control board clockwise, and take it out.
- ④ All parts are washable except the control board. Do not use metal stuff for cleaning to avoid damaging the product surface.

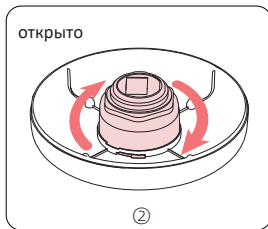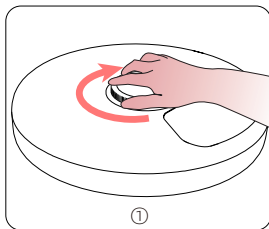

#### \*Примечание:

После кормления свежим кормом или консервами рекомендуется немедленно очищать кормушку каждый день.

### Чистка основной платы

Извлеките основную плату, протрите внешнюю часть мягкой влажной тряпкой.

#### \*Примечание:


Основная плата не является водонепроницаемой. Запрещается мыть основную плату.






## Install the Control Board

- ① Align the main board buckle with the bottom housing installation slot, hold and rotate it counterclockwise to hear a “click” sound.
- ② Check whether the main board is installed in place

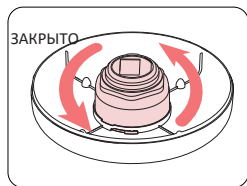

①

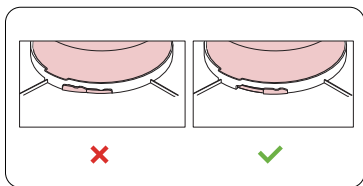

②

### \*Примечание:

If the control board is not installed properly, the food bowl will be misaligned and then the feeder can't normal use.

## Change Batteries

Install 3pcs AA batteries at the device bottom.

**Примечание:** Please make sure the 3pcs AA batteries are new and same specifications. Different battery specs and lifelong will effect the device working normally.

	On	Full Charged
	Flash	Low Battery

## Устранение неисправностей

Признак неисправности	Анализ причины	Решение
Дисплей не загорается	Питание отсутствует	Замените батареи
	Неисправность устройства	Свяжитесь со службой послепродажного обслуживания
Чаша для корма смещена	Неправильно установлена плата	Проверьте, правильно ли установлена плата
	Неисправность устройства	Свяжитесь со службой послепродажного обслуживания
E1: -- Display	Неисправность фотореле	Свяжитесь со службой послепродажного обслуживания
E4: -- Display	Неисправность мотора	Свяжитесь со службой послепродажного обслуживания
E5: LP Display	Низкий заряд батареи	Замените батареи